



Swan
designed for life



DUO

8 Litre

Dual Basket Air Fryer

Model: SD10410N

Helpline: 0333 220 6050





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning, when filling or emptying the tank or adding/removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions, precautions and instructions, could affect the safe operation of this product.
- Don't use the appliance with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the rating label.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Use only CE marked 13-amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Store the appliance in a cool, dry area.
- This product should only be used indoors.
- This product should not be operated without the fry baskets.



TECHNICAL DATA

Description:	8L Dual Basket Air Fryer
Model:	SD10410N
Input voltage:	220~240 V
Frequency:	50/60Hz
Power consumption:	1600-1800 Watts



CAUTION!

Do not immerse in water



DUO DUAL AIR FRYER BENEFITS

 
- Reduced cooking times
- Saves energy
- Little or no pre-heating needed
- Even cooking with little or no fat required
- Compact, space-saving design





 
GETTING TO KNOW YOUR DUAL BASKET AIR FRYER

1. Digital touch screen
2. Fryer housing
3. Power cord
4. Basket chamber for basket A
5. Basket chamber for basket B
6. Basket A
7. Basket B
8. Rack x 2

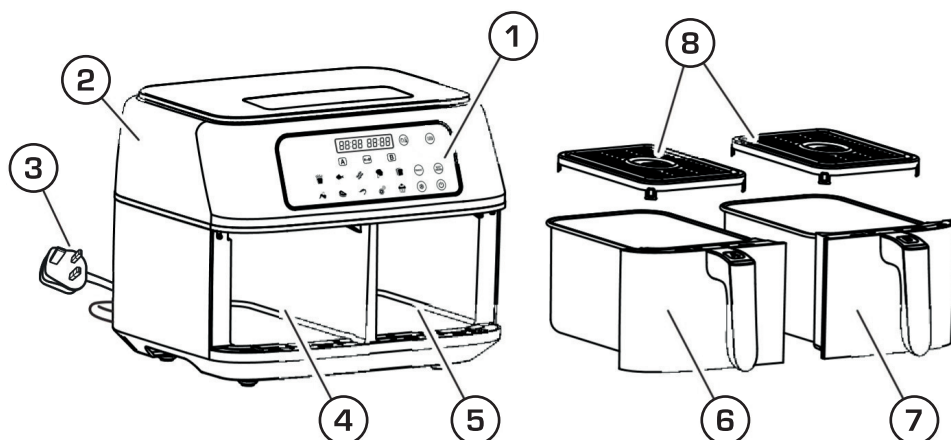



GETTING TO KNOW YOUR DUAL BASKET AIR FRYER

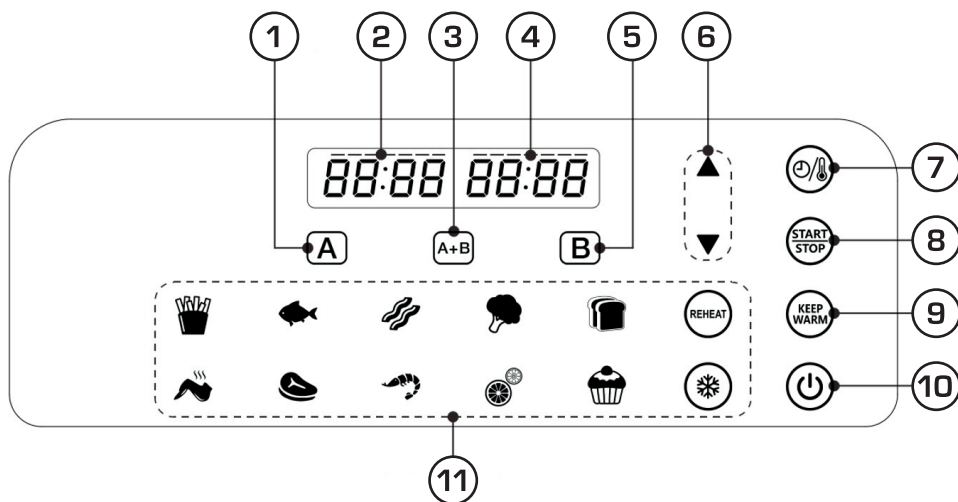

1. Fryer chamber A select
2. Fryer A LED panel
3. Double fryer chamber select
4. Fryer B LED panel
5. Fryer chamber B select
6. Time/temp +/- key
7. Time/temp setting select
8. Start/stop function select
9. Keep warm select
10. Power switch on/off select
11. Menu selection area

Important! Please ensure all food is piping hot throughout before consuming.





BEFORE FIRST USE

- Before using for the first time, remove all packaging and any promotional labels.
- Remove the base trays/racks, fry baskets, and wash in warm, soapy water. Rinse and dry thoroughly before putting back into the dual air fryer.
- Ensure the dual air fryer is on a stable, even surface.
- **DO NOT** put any oil into the fry baskets or base trays/racks.
- **DO NOT** use the dual air fryer without the base tray/racks, fry baskets.



USING THE FRYER

Pull the baskets out of the machine as shown in fig.1 and fig.2, then put the food into the baskets (make sure rack is placed inside), and then push the baskets into the inner chambers as shown in fig.3.

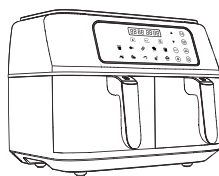 


fig.1

 
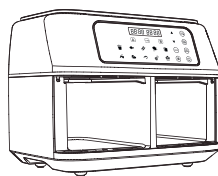 


fig.2

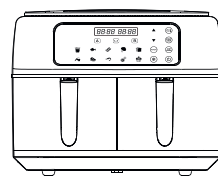 


fig.3






USING THE FRYER

WARNING: It is very **DANGEROUS** to place any oil the basket.

 
If essential, it is permissible to spray or lightly coat the food in oil before air frying.

The volume of food must not exceed the MAX FILL level of the basket. Please put the food on the rack and NOT directly on the bottom of the basket. Any excess oil will drain into the bottom of the basket when the food is fried.

Please allow room for food to expand as it cooks.

There is a built-in safety switch for each basket, as shown in fig.4 below. Only when the basket is fully closed will the switch allow the fryer to power into the standby mode, otherwise, an alarm will sound when pressing the  button.

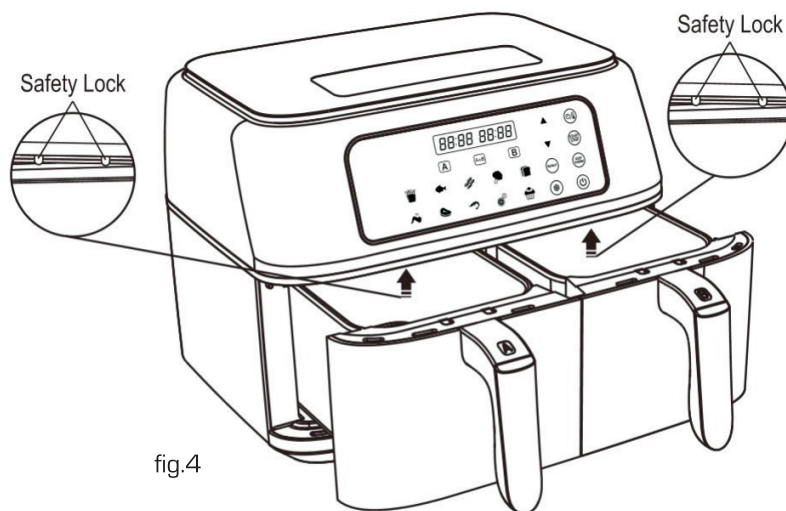

After cooking the food, please use heat-resistant gloves if you need to remove the rack or tray immediately. Always use caution when handling hot food or equipment.





 





USING THE FRYER

Select a working mode

Plug in the fryer and turn on the switch at the mains socket. A BEEP sound will be heard after powering on the machine, and the power indicator will light up . This means the air fryer has entered standby mode. Press the power  button, and all the function keys on the touch screen will light up.

There are 4 working modes for you to choose from:

1. Power on the dual air fryer and press  button to select fryer A. Only the A basket can be set-up.
2. Power on the dual air fryer and press  button to select fryer B. Only basket B can be set-up.
3. Power on the dual air fryer and press  button to select fryer A+B. Both baskets A and B can be set-up. Please note that you can only set up the same menu, temperature and time for both A & B baskets in this mode.
4. Power on the dual air fryer and press the  button, then set up the menu for basket A. Then press the  button and set up the menu for basket B. Finally, press the  button to start frying. In this mode you can set up the same or different menus, temperatures and times for the A & B baskets.





USING THE FRYER

Menus:

Menu Name	Keep Warm	Fries	Fish	Bacon	Vegetable	Toast	Reheat
Menu Icon							
Time/Minute	120	18	15	15	15	5	3
Temperature °C	60	200	170	160	150	190	180

Menu Name	Chicken Wings	Steak	Shrimp	Dehydrate	Cake	Defrost
Menu Icon						
Time/Minute	18	12	13	1200	25	15
Temperature °C	175	160	170	50	150	45



 


NOTE: Settings are indications only. Since ingredients differ in origin, size, shape and brand, we cannot guarantee the best setting for your ingredients.

1. A BEEP sound will be heard after powering on the appliance, at the same time all function keys will flash for 1 second, and the indicator will light up, all other lights will be off, which means the machine has entered standby mode.








 

USING THE FRYER



 
2. Press the power  button, and all the function keys on the touch screen will light up.
3. Press one of the fryer select options to choose a fry basket mode,   or . The LED screen will display , temperature and time will be displayed alternately. (The default temperature is 180°C and the default time is 30 minutes).


 

Choose any menu option and this menu key will flash (All other menu keys will be lit, the selected menu can be switched freely within 5 seconds).

The setting parameters of this menu are displayed on the screen. Press the  to select and adjust the time/temperature as you prefer.

Finally, press the  button, the air fryer will start frying (it will commence frying automatically with a BEEP sound heard after 5 seconds even if no button is pressed).

When operating, the selected menu button lights up and the others will turn off (but all menu keys are lit up when the machine is powered on only). The selected frying option   or  will light up too.

Repeat this process to choose any combination of  or  or  baskets to fry with.

Press and hold the illuminated basket selection   or  for 3 seconds to cancel the current operation.









USING THE FRYER






Using the frying baskets independently or together



Power on the machine, press the **(A)** button, then choose any menu to make the A basket start frying, and then press the **(B)** button, then choose any menu to make B basket start frying. Both A and B basket are now running at the same time. When working, the key of the selected menu lights up always and other lights will turn off. The **(A)** **(A+B)** **(B)** button indicator lights will flash.



When the air fryer is operating the     buttons and the indicator of selected menu will light up (all menu indicator lights are off in the custom menu mode). Temperature and time will be displayed alternately, one or two of the selected basket buttons **(A)** **(A+B)** **(B)** will flash and the others will light up.

When the machine is operating, you can still adjust the temperature and time. Any new settings for temperature and time will begin immediately.

Only one basket is working:

Press  to set up the temperature and time (press  again to switch temperature and time setting). The number flashes when setting up temperature/time by tuning the  button. Then press  to start frying, it will start frying automatically with a BEEP sound heard after 5 seconds even if the  button is not pressed.

The temperature range is 45-200°C, you can adjust by 5°C by pressing either of the  buttons once. Press and hold either of the  buttons for faster adjustments.

The time range is 1-60 minutes, you can adjust by 1 minute increments by pressing either of the  buttons once. Press and hold either of the  buttons for faster adjustments.












USING THE FRYER



Both A and B baskets are working:


Firstly, press **[A]** **[A+B]** or **[B]** button [e.g., if you want to adjust temperature/time for A basket, then press **[A]** button].

Press  to set up temperature and time [press  again to switch temperature and time setting] The number flashes when setting up temperature/time by tuning the  buttons. Then press  to start working. It will start working automatically with a BEEP sound heard after 5 seconds even if the  button is not pressed.

The temperature range is 45-200°C you can adjust it in 5°C increments by pressing either of the  buttons once. Press and hold either of the  buttons for faster adjustments.

How to stop frying:

If only one basket is operational: Press the  button once to stop the frying operation. The current menu indicator light will flash, press the  button again to re-start frying. It will automatically exit the current working mode if there is no operation for 10 minutes in the STOP status.

Both A and B baskets are frying: Press the button applicable to the basket you wish to stop frying. For example, if you only wish to stop basket B, press the **[B]** button, then press . The B basket will stop frying and the menu selection light will flash. Press the B button again to re-start frying. Press the B button to re-start frying with that basket.

Repeat this sequence but with the **[A]** button to do the same for the A Basket.

If there is no operation for 10 minutes while in the STOP status the fryer will exit its current mode.














USING THE FRYER

The A and/or the B basket will stop working when either basket is pulled from the chamber, triggering the safety switch. The appliance will retain the current menu settings including time and temperature, these lights will flash until the basket is correctly returned to the chamber. Please reset the menu if the basket is pulled out for more than 10 minutes or the fryer will power off automatically.

Keep warm function

Program keep warm mode only: Power on the machine. First, press the **A** **A+B** or **B** button (e.g., if you want to keep warm the A basket, then press the A button). Press the  button, then press  button to enter the keep warm mode, the keep warm indicator light will flash. The pre-set temperature is 60°C and time is 2 hours. Time is adjustable by pressing  but not the temperature. (You can press the  button again to cancel before it enters keep warm mode).


Program keep warm mode (for when frying is complete) during initial setup: Power on the machine, first choose the basket and your menu option then press  (you can adjust the keep warm time within 5 seconds). Press the  button to begin. Once the food has finished cooking, it will enter keep warm mode with 3 BEEP sounds heard and the LED screen will show the keep warm data (the keep warm indicator light flashes always and you can press the  button again to cancel before it enters the keep warm mode).


Program keep warm mode during frying: Firstly, press the **A** **A+B** or **B** button (e.g., if you want the keep warm mode for A basket, press the **A** button). Press the  button, then press the  button at the same time. The fryer will continue operating.





USING THE FRYER

Once the food finished cooking, it will enter keep warm mode with 3 BEEP sounds and the LED screen will show the keep warm data. (The keep warm indicator light will flash. You can cancel the mode by pressing  again before it commences).

Tips: During cooking, shaking the food regularly or irregularly will help to cook it more evenly. Setting up the temperature slightly lower but the time slightly longer may also help to improve some food. Press and hold  buttons to adjust the temperature/time faster.

Attention! Some parts of the appliance will reach a very high temperature when working and for a while after, such as the basket, rack, tray, etc. Please do not touch these with bare hands. We recommend heat-resistant cooking gloves be worn.

Frying complete

When the timer reaches 00:00, the air fryer will emit 5 BEEP sounds. The heating elements will stop working but the motor will still be running until the temperature cools down to 120°C. The LED lights will turn off.

Warning!

1. The motor will still run to help cool the temperature inside the air fryer.
2. The food and basket will be hot after cooking is complete. Exercise caution and use heat-resistant gloves or towels when handling the basket.

Tips: After you are finished cooking, if the food is not cooked enough or the food is cooked unevenly, you can increase the cooking time accordingly until ready.

Check that all food is properly cooked through before serving.





CLEANING AND MAINTENANCE

Attention! Be sure to unplug the appliance before cleaning.

1. Clean the basket and rack with hot water, a mild detergent, and a non-abrasive sponge.
2. Do not submerge the power cord, plug, or housing in water or under the tap during cleaning as this may cause shock and/or damage.
3. After rinsing any accessory, allow drying time before storing the air fryer.



DISPOSAL OF UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit **www.recycle-more.co.uk** or **www.recyclenow.co.uk** for access to information about the recycling of electrical items.

Please visit **www.wEEEireland.ie** for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

Helpline: **0333 220 6050**

Find advice online: **www.swan-brand.co.uk/support**





STORE YOUR RECEIPT

Affix your receipt here
for safe keeping

Notes

Notes section with horizontal dotted lines for writing.





www.swan-brand.co.uk/support

Follow us online



Copyright © 2022

Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

